


JasperMate quick start

From the box to your first programme in three steps:
put it together, get it online and tell it what to do.


Stuck? Email mate@jasperx.com.au

In the box

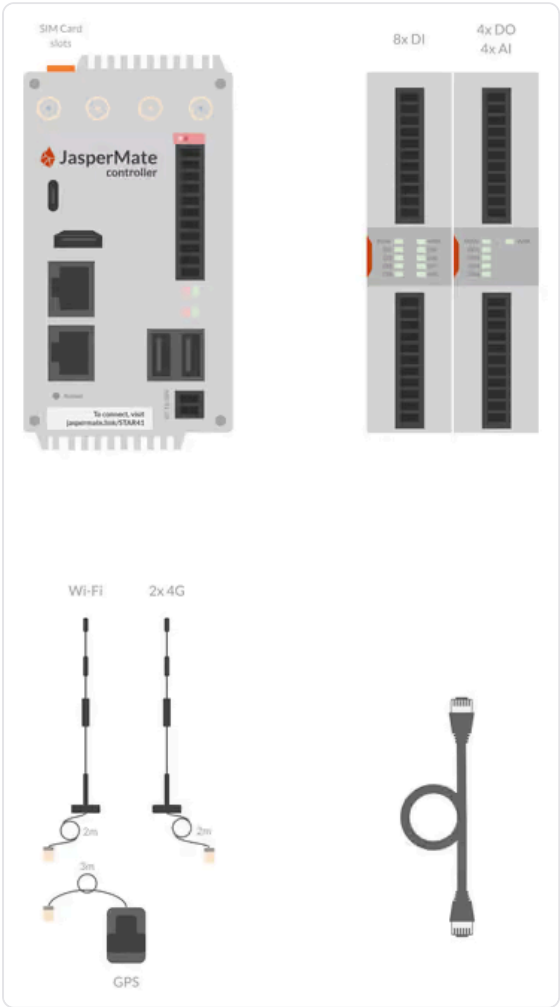

JasperMate controller	The base unit, with 2 nano-SIM slots on top
I/O cards	One with 8 digital inputs; one with 4 relay outputs and 4 analogue inputs
Antennas	Wi-Fi, 2 × 4G and GPS, on 2 m and 3 m leads
Ethernet cable	1 m


1. Put it together and power it up

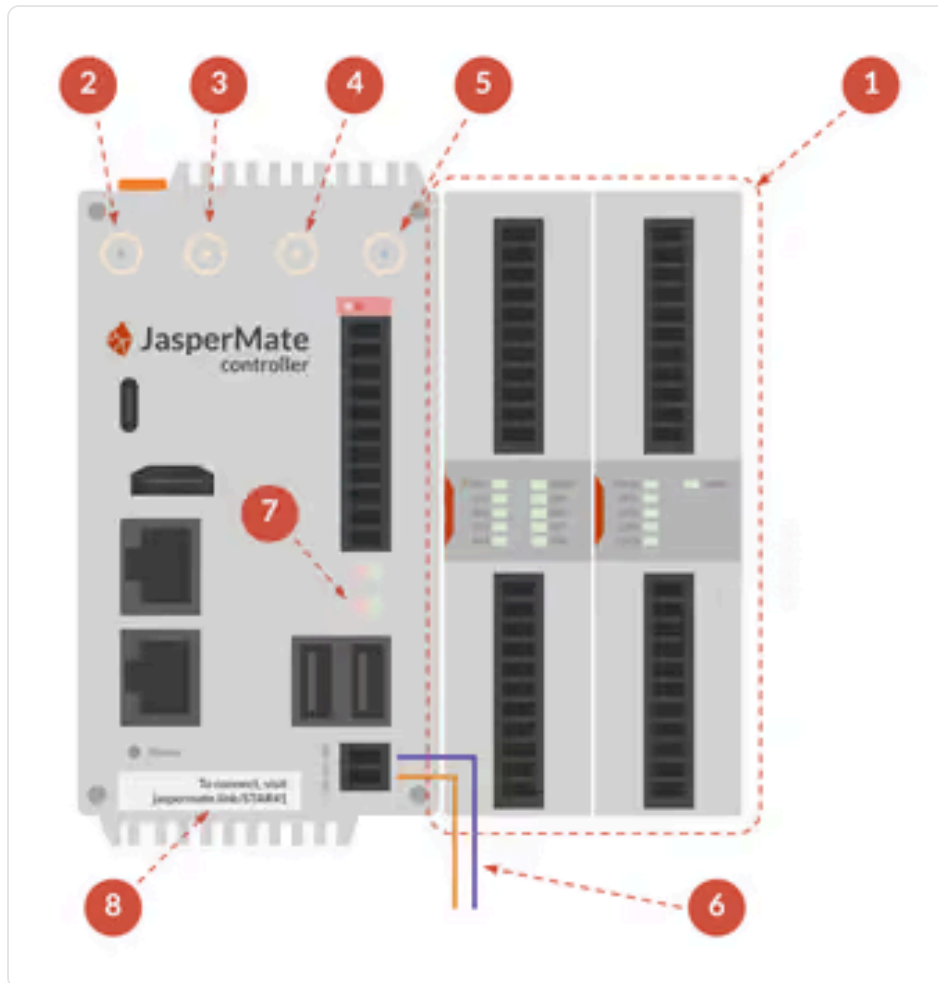


- 1 Slide the I/O cards onto the base unit until their contacts are firmly connected.
- 2 Attach the Wi-Fi antenna to WIFI (female connector).
- 3 Attach a 4G antenna to ANT1 (male connector).
- 4 Attach the second 4G antenna to ANT2 (male connector).
- 5 Connect the GPS antenna to GPS (optional).
- 6 Connect a 12-36 V DC power supply.
- 7 Check that the red PW light is on and the green WK light is blinking.
- 8 Find the setup address on the front label. It looks like jaspermate.link/STAR41.

2. Connect it to Wi-Fi


- 1 On your phone, open the setup address from the label. You may need to create a JasperX account first.
- 2 Follow the steps on the page to connect JasperMate to your Wi-Fi or your phone's Personal Hotspot.
- 3 Wait until JasperMate is on the network: light L1 goes off and L2 blinks.
- 4 Once JasperMate is online, claim it.
- 5 Click **Open the programme**.

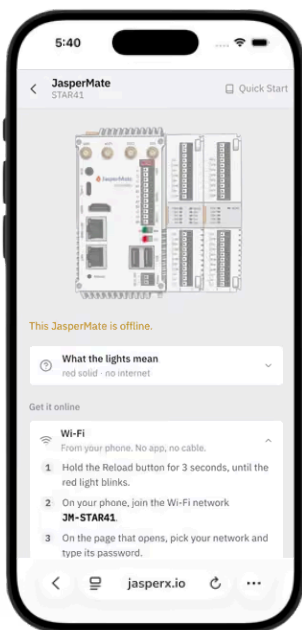

Steps 2 and 3

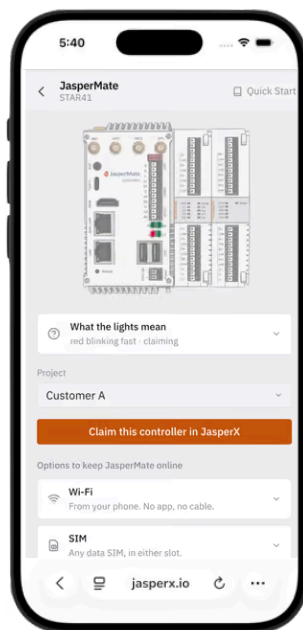


Step 4

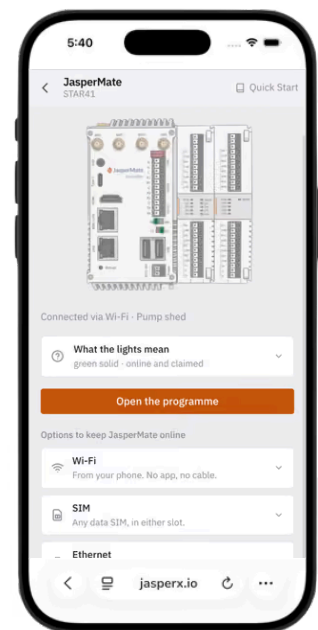


Step 5

3. Start in the chat with Jasper

- 1 Click **Go online** to work with the controller.
- 2 Start with a simple prompt, such as "Blink output 1 every second".

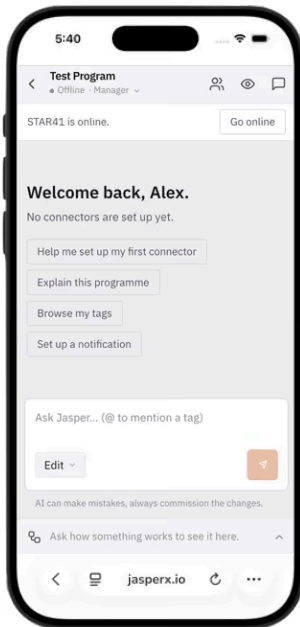

Step 1

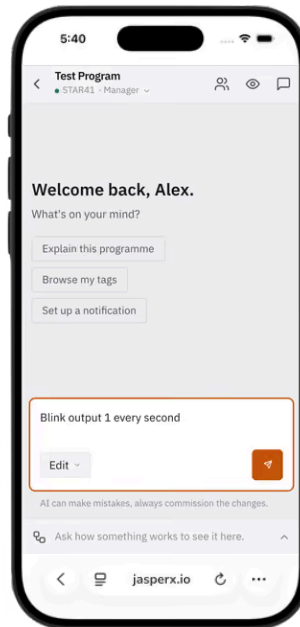

Step 2